


**MARTIN UNIVERSAL DESIGN, INC.**  
**U-280N ADJ. ART/DISPLAY EASEL**  
**ASSEMBLY INSTRUCTIONS**

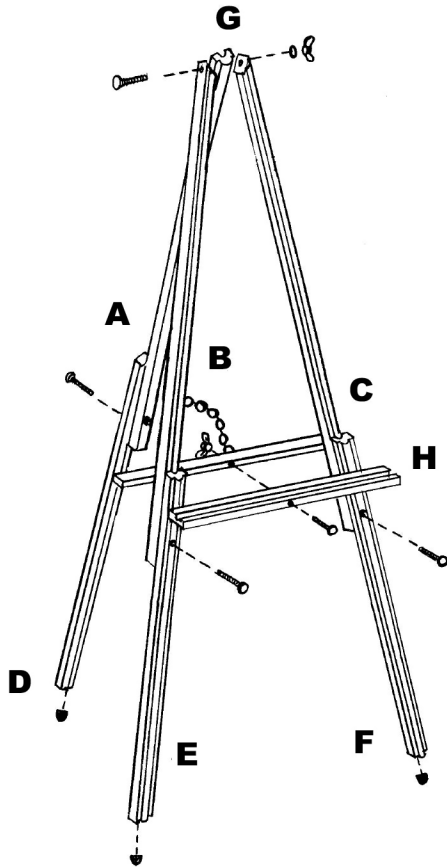

**STEP (1)**

Attach rubber tips to ends of lower legs (D, E, F) tap lightly with a hammer if needed.

**STEP (2)**

Position all 3 legs (upper legs A, B, C) at the top (G) and secure with 3" bolt, washer and wing nut.

**STEP (3)**

Position 3 leg posts (lower legs D, E, F) to desired height. Insert 2" bolt through each leg and secure at back with one washer and wing nut on each bolt. One end of chain must be attached to back bolt before securing with washer & wing nut.

**STEP (4)**


Attach canvas holder and pressure bar (H) with 3" bolt. Place other end of chain over bolt, secure with wing nut.

**PLEASE NOTE:** All holes are drilled to close tolerances for maximum rigidity. It may be necessary to tap bolts in place with a hammer.

**PERIODIC RE-TIGHTENING  
 OF EASEL WILL ASSURE A  
 STURDY PRODUCT.**

**Martin Universal Design, Inc.**  
 4444 Lawton Avenue, Detroit, MI 48208 U.S.A.  
 Tel:(313)895-0700 • Fax:(313)895-0709

**MARTIN UNIVERSAL DESIGN, INC.**  
**U-280N ADJ. ART/DISPLAY EASEL**  
**ASSEMBLY INSTRUCTIONS**

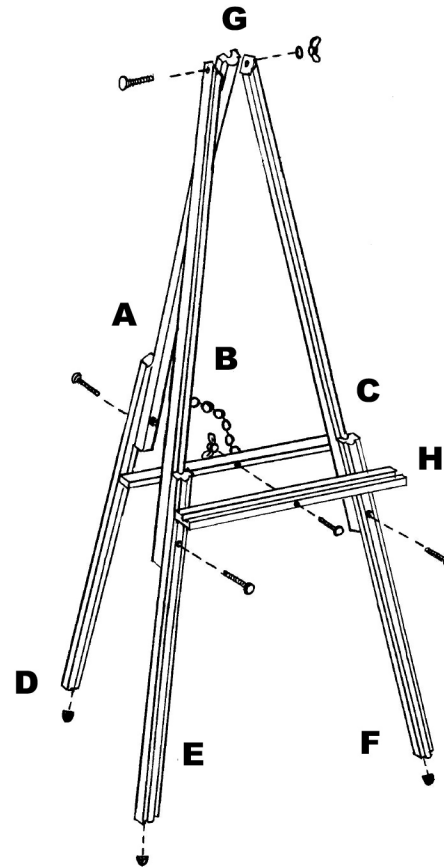

**STEP (1)**

Attach rubber tips to ends of lower legs (D, E, F) tap lightly with a hammer if needed.

**STEP (2)**

Position all 3 legs (upper legs A, B, C) at the top (G) and secure with 3" bolt, washer and wing nut.

**STEP (3)**

Position 3 leg posts (lower legs D, E, F) to desired height. Insert 2" bolt through each leg and secure at back with one washer and wing nut on each bolt. One end of chain must be attached to back bolt before securing with washer & wing nut.

**STEP (4)**

Attach canvas holder and pressure bar (H) with 3" bolt. Place other end of chain over bolt, secure with wing nut.

**PLEASE NOTE:** All holes are drilled to close tolerances for maximum rigidity. It may be necessary to tap bolts in place with a hammer.

**PERIODIC RE-TIGHTENING  
 OF EASEL WILL ASSURE A  
 STURDY PRODUCT.**

**Martin Universal Design, Inc.**  
 4444 Lawton Avenue, Detroit, MI 48208 U.S.A.  
 Tel:(313)895-0700 • Fax:(313)895-0709