

U-9110 Kids' Easel

Set-up Assembly Instructions

See reverse side for detailed set-up instructions

- Large Black Chalkboard



- Paper Roll

- Spacious Dry-Erase Surface



- Spacious Double-sided Materials Tray

- Sturdy Decorative Legs




Martin Universal Design, Inc. • 4444 Lawton Ave., Detroit, MI 48208 USA
Tel: 313.895.0700 • Fax: 313.895.0709 • E-mail: Custservmud@aol.com
www.MartinUniversalDesign.com

U-9110 Kids' Easel • Set-up Assembly Instructions


Open carton and remove all contents. Check to make sure carton contains:

A. [1] folded easel **B.** Paper Roll and Rod **C.** Small carton containing supplies: ([1] Chalkboard Eraser, [1] Box of chalk, and [2] Dry-Erase Markers


STEP 1. Begin by taking folded easel and spreading out the legs as shown below.

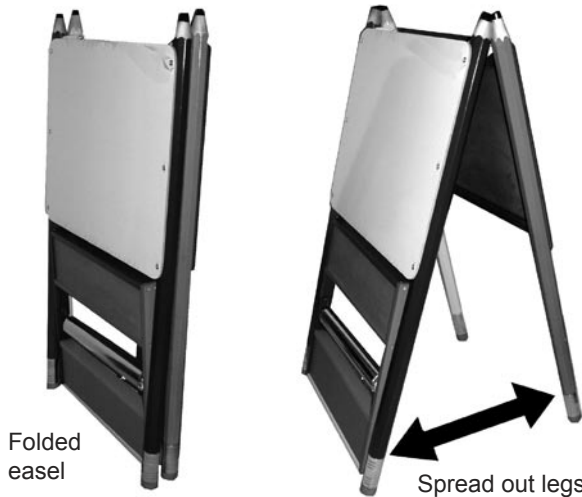


STEP 3. Attach Paper Roll by inserting wood rod through paper roll. Insert one end of wood rod into hole on inside edge of supply tray. Continue by inserting other end of wood rod into slotted groove on other end of supply tray. Slide wood rod over to secure in place.

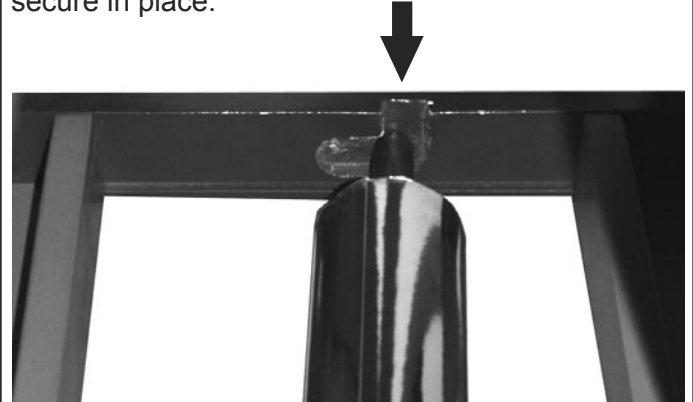

STEP 2. Locate for the [2] Tray Plastic pins on the inside legs. Flip-up the supply tray and slide plastic pin into groove on supply tray. Slide pin up then, push leg back to lock pin in position.

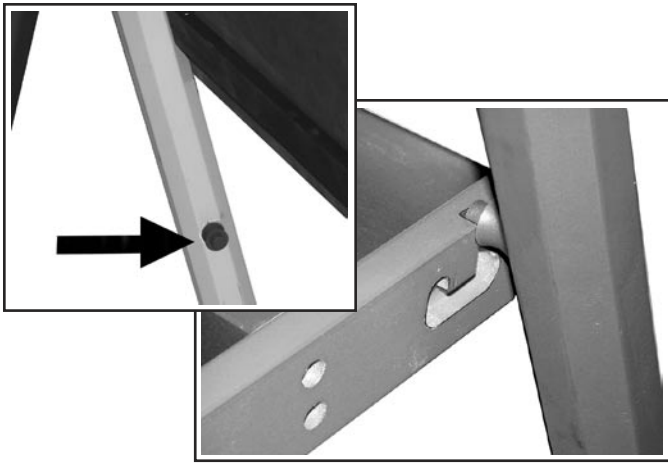

STEP 4. Remove protective film from the Dry-Erase surface, by peeling it away. See illustration at right.

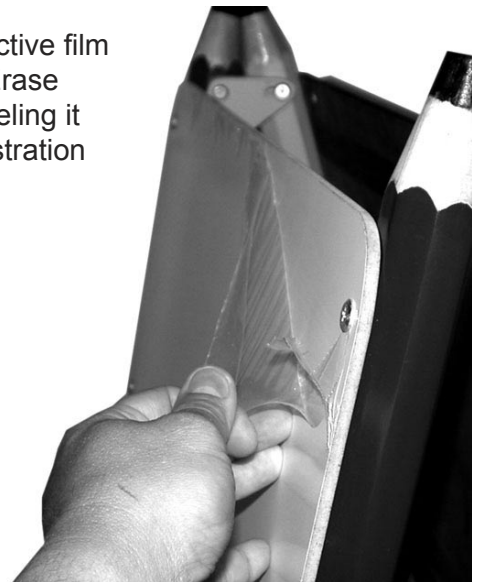

STEP 5. Unroll Paper from the paper roll and thread it up through and between the two surfaces of the easel, continue by sliding it down between the Chalkboard surface and Paper Holder that can be found near the top edge of the chalkboard surface. This Paper Holder edge can also be used to tear away a section of paper from the paper roll.

STEP 6. ENJOY your New U-9110 Kids' Easel