



# CAMBRIDGE I & II PRINT RACK

## Assembly Instructions - Page 1

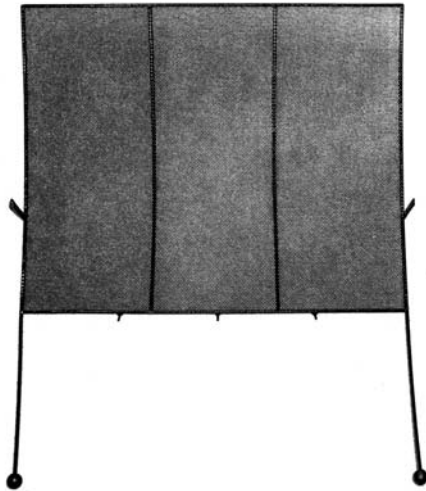

**Part A**

This side has the hinges attached

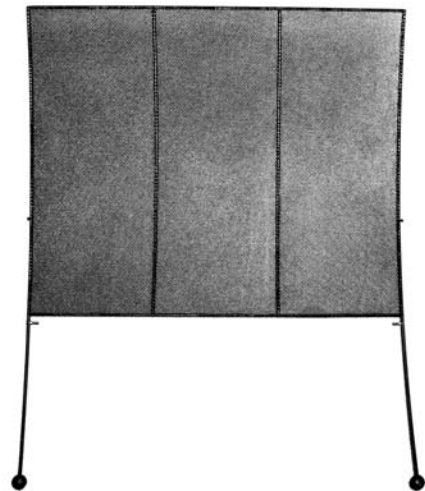

**Part B**

This side has the [2] screws & nuts attached

### ASSEMBLY INSTRUCTIONS ARE THE SAME FOR BOTH MODEL I & MODEL II

#### STEP 1.

Begin by removing any protective packaging found wrapped around the print rack parts and discard.



Remove the [2] Screws and nuts from Part B.

#### STEP 2.

Place Part B in-between the legs of Part A as shown in FIG 1 at right.

#### STEP 3.

Secure by inserting the screw through the side outer hole of Part A and through the hole in the side of Part B. Secure with nut. NOTE: Hold Nut in place with wrench while tightening screw with screwdriver. See FIG 2.

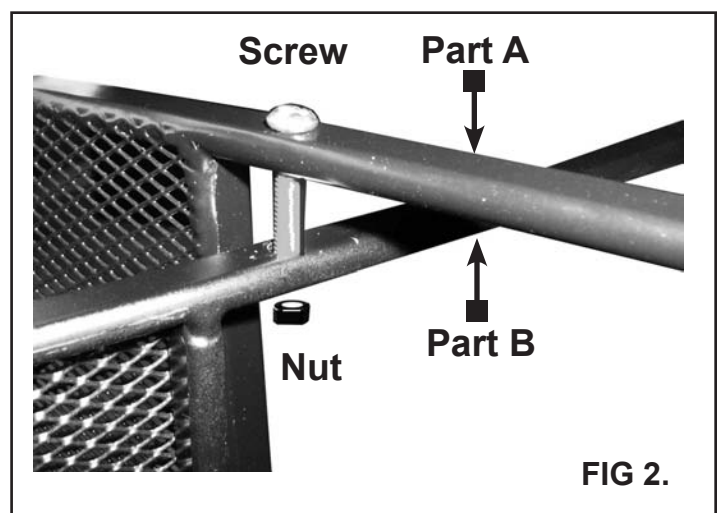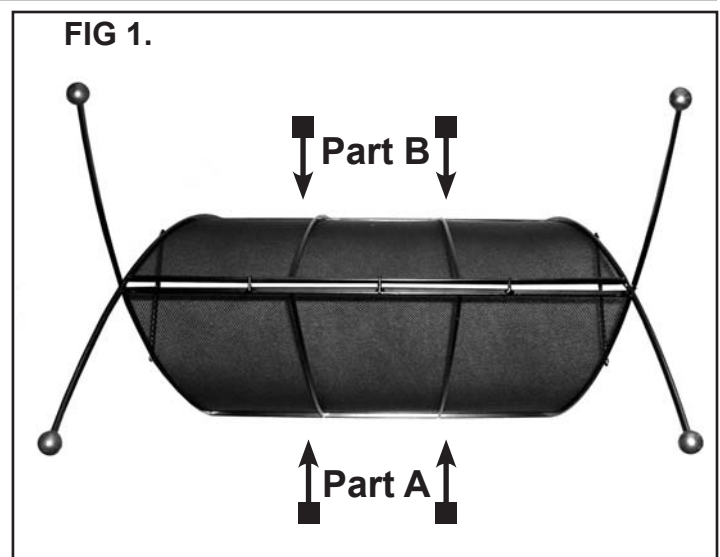

Martin/F. Weber Co. • 4444 Lawton Avenue, Detroit, MI 48208 USA  
Tel:(313)895-0700 • Fax:(313)895-0709 • E-mail:Custservmud@aol.com  
www.MartinUniversalDesign.com • www.weberart.com • Made in China

# CAMBRIDGE I & II PRINT RACK

## Assembly Instructions - Page 2



### STEP 4.

Once Screws and nuts are secure, turn the Cambridge Print Rack over onto its rubber balled feet. See FIG 3.

### STEP 5.

Secure Side Hinges by clasping down the notch over the rivet on the side of Part B. See FIG 4 & FIG 5.

**Your Cambridge Print Rack is now ready to use.**

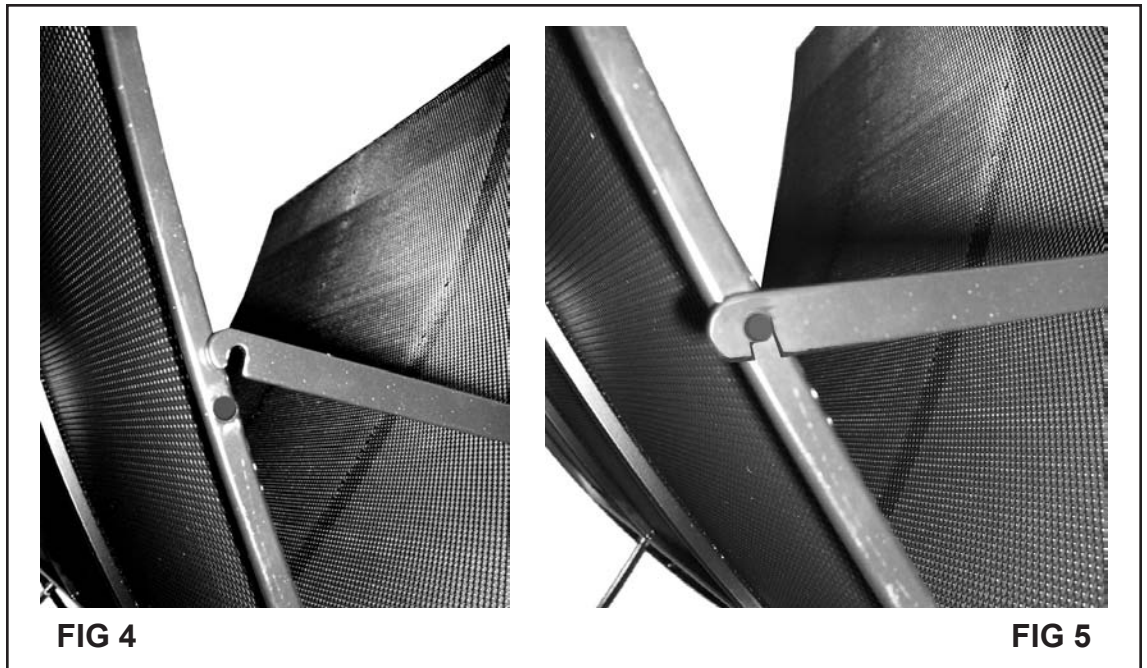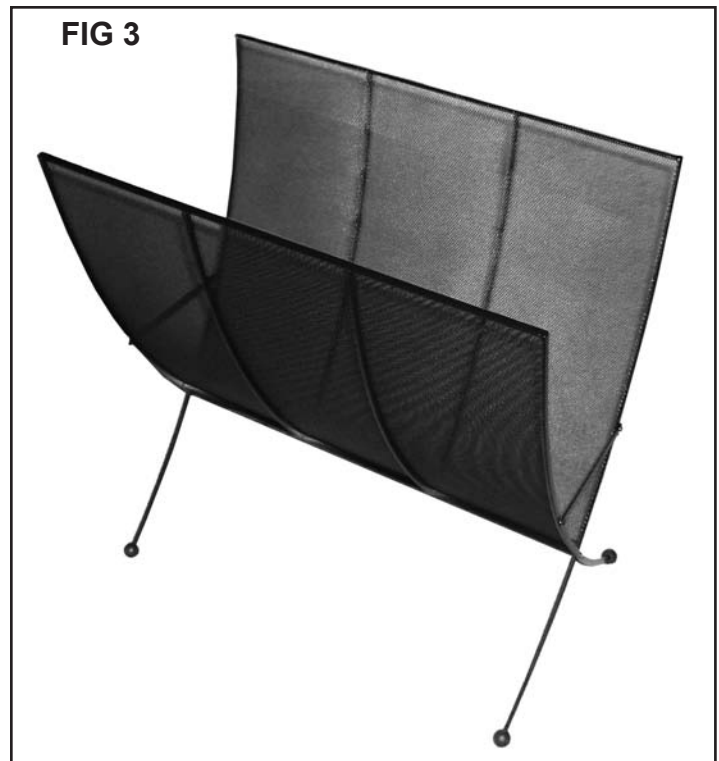

Martin/F. Weber Co. • 4444 Lawton Avenue, Detroit, MI 48208 USA  
Tel:(313)895-0700 • Fax:(313)895-0709 • E-mail:Custservmud@aol.com  
www.MartinUniversalDesign.com • www.weberart.com • Made in China

Created OCT07 RPI