


STILETTO

Model 91-1106

IMPORTANT NOTICE
 YOU WILL FEEL A SLIGHT
 "BOUNCE-BACK" WHEN YOU SIT DOWN.
 THIS IS NORMAL: NOT A DEFECT.
 THE PNEUMATIC CYLINDER FOR THE SEAT
 HEIGHT ADJUSTMENT REACTS TO YOUR
 WEIGHT BY GIVING A LITTLE

Parts

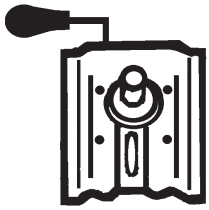


A. [1] Base Plate & Lever



B. [1] Cylinder



C. [1] Backrest Support Bar
 Note: Part [J] is attached to part [C]

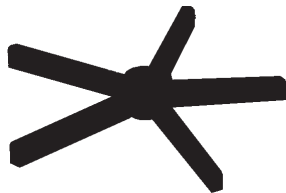


D. [1] 5-Star Base



E. [5] Push-in Castors




F. [1] Backrest

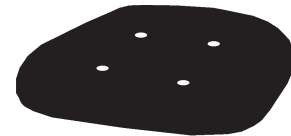


G. [1] Seat
 Note: Part [L] 4 screws are attached to part [G]



H. [1] Backrest Cover

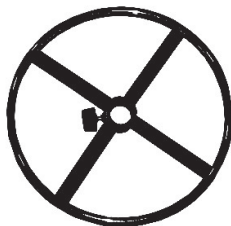

I. [1] Foot Ring

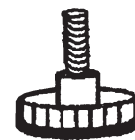

J. [1] Knob
 Note: This knob is attached to Part [C]



K. [4] 3/4" Black Screws
 Note: These screws are attached to Part [G]



L. [2] 1" Black Screws


IMPORTANT

If you have difficulty assembling your chair or need customer service assistance. Please call: Martin Universal Design, Inc. Customer Service Hot Line at 1-313-895-0700. If you need additional parts, it is not necessary to contact your dealer, our Customer Service Rep. will forward them to you immediately.

MARTIN
 Universal Design, Inc.


4444 Lawton Avenue, Detroit MI 48208 USA
 Tel: (313) 895-0700 • Fax: (313) 895-0709
 E-mail: Custservmud@aol.com
 Visit us at:
 www.MartinUniversalDesign.com

1.

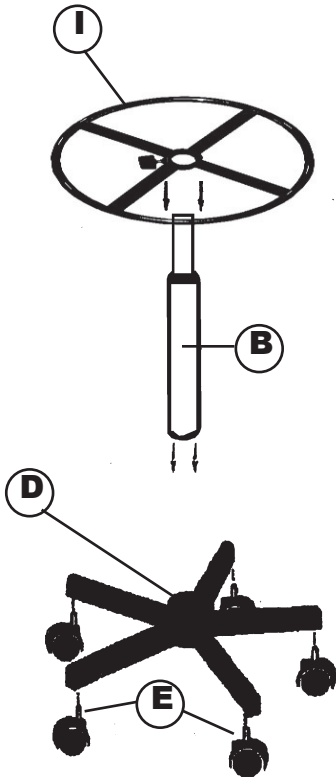


Place base (D) face down and push castors (E) in firmly. Insert cylinder (B) through base cap into chair base. Twist and press firmly. Slide Foot Ring (I) down over cylinder.

2.

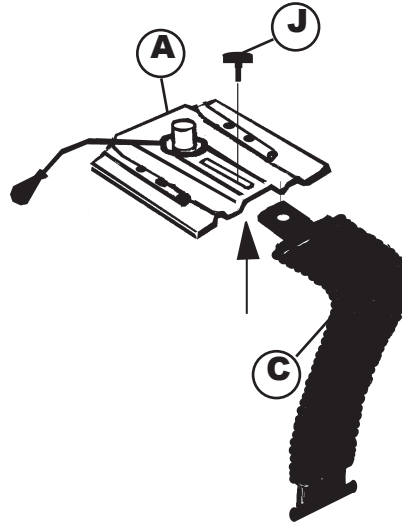


Attach support bar with bellows (C) to seat plate (A) by sliding the bar into the raised area of the seat plate (see arrow for location). Thread Knob (J) into hole in seat plate, making sure knob threads through seat plate.

3.

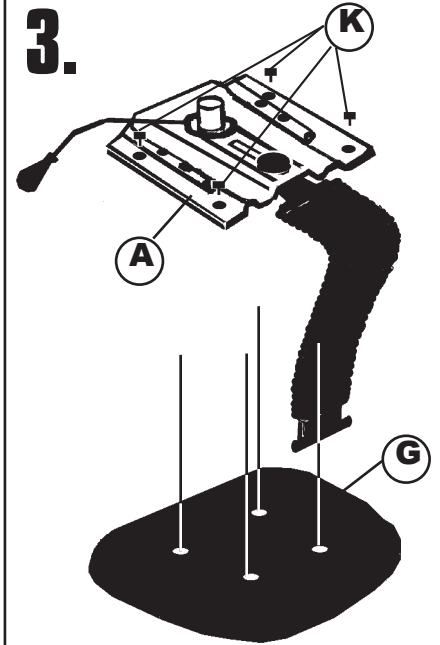

With seat cushion lying plastic side up, line up holes in seat plate (A) with holes in seat cushion (G). Attach with [4] 3/4" black screws (K). Tighten securely.


4.

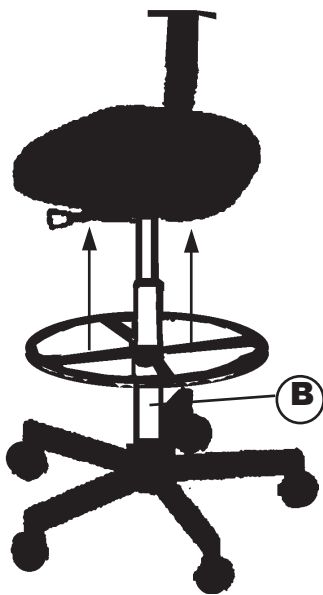

Take the complete seat assembly and insert the seat plate over the cylinder (B) by inserting the cylinder into the hole on the bottom of the seat plate (A).

MARTIN
Universal Design, Inc.

5.

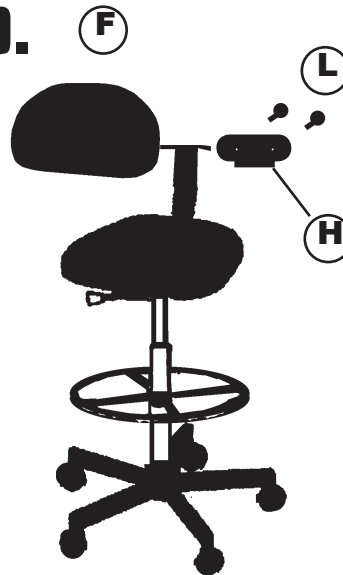

Attach backrest (F) to backrest support bar by snapping backrest cover (H) over "T" of Support bar. Continue by attaching to backrest using [2] 1" black screws (L). Tighten securely.

Chair is now ready to be used.

6.



Once complete, Double check all screws and bolts to make certain nothing is loose. Chair is now ready to be used.